



File Name: control 4 avm-mc1-b manual.pdf

Size: 1575 KB

Type: PDF, ePub, eBook

Category: Book

Uploaded: 6 May 2019, 22:42 PM

Rating: 4.6/5 from 569 votes.

Status: AVAILABLE

Last checked: 18 Minutes ago!

In order to read or download control 4 avm-mc1-b manual ebook, you need to create a FREE account.

[**Download Now!**](#)

eBook includes PDF, ePub and Kindle version

[Register a free 1 month Trial Account.](#)

[Download as many books as you like \(Personal use\)](#)

[Cancel the membership at any time if not satisfied.](#)

[Join Over 80000 Happy Readers](#)

Book Descriptions:

We have made it easy for you to find a PDF Ebooks without any digging. And by having access to our ebooks online or by storing it on your computer, you have convenient answers with control 4 avm-mc1-b manual . To get started finding control 4 avm-mc1-b manual , you are right to find our website which has a comprehensive collection of manuals listed.

Our library is the biggest of these that have literally hundreds of thousands of different products represented.



Book Descriptions:

control 4 avm-mc1-b manual

Control4 reserves the right to revise this publication and to make changes. Control4 makes no representations or warranties with respect to any. Control4 software, and specifically disclaims any express or implied trademarks. Control4 and the Control4 logo are registered trademarks of Control4, Corporation. Other product and company names mentioned in this Legal Notice. Fraunhofer IIS and Thomson. MPEG Layer3 audio coding technology. Supply of this product does not guarantee. Music recognition technology and related data are provided by Gracenote. Gracenote is the industry standard in music recognition. For more information visit Copyright. All rights reserved. No part of this Contact Us. Control4 Corporation Salt Lake City, UT 84020 USA Part Number 210050 Rev A Draft 7 in progress. Hardware Model Number AVMMC1B Preface. About This Guide. 1. Notes, Tips, Cautions, and Warnings. 1. Additional Resources. 2. Chapter 1. Introduction to Media Controller. 3. Role in a Control4 System. 3. Features and Benefits. 4. Requirements. 4. Supported Devices. 5. What's in the Box. 5. About the Media Controller. 5. Front View with Door Opened. 7. Back View. 8. Chapter 2. Set Up the System. 11. Plan Your Equipment Layout. 11. Physical and Logical Connections. 12. Home Network Requirements. 12. Sample Setup Diagrams. 13. Determine Best Video Option. 16. Use a Worksheet. 16. Connect to a Monitor or TV. 19. Connect to the Network. 20. Connect Devices. 20. Use the Pluggable Terminal Blocks. 20. Connect Wires to a Configurable Serial Port. 21. Add IR Receiver Capabilities to Remote Locations. 22. Set Up IR Signal Generation to Control Third Party Devices. 23. Use Video Sense Loop to Relocate the WiFi Antenna. 24. Set Up Logical Connections. 24. Check Setup Using OnScreen Display. 25. Chapter 3. Use Media Controller. 27. User Interfaces. 27. OnScreen Navigator. 27. System Remote Control with LCD. 28. Media Controller Front Display. 29. View or Edit Setup Information. 30. Play a CD. 30. <http://yjunguk.com/userfiles/colt-ar-15-rifle-manual.xml>

- **control 4 avm-mc1-b manual, control 4 avm-mc1-b manual pdf, control 4 avm-mc1-b manual download, control 4 avm-mc1-b manual free, control 4 avm-mc1-b manuals.**

Choose a Playlist Option. 31. Understand Future Feature Support. 32. Chapter 4. Warranty and FCC Information. 33. Warranty. 33. Limited Hardware Warranty. 33. Hardware Warranty Terms. 34. Software Agreement. 37. FCC Information. 38. FCC Interference Statement. 38. FCC Caution. 39. Notes, Tips, Cautions, and Warnings. Media Controller Installation and User Guide Note, Tip, Caution, and Warning paragraphs draw your attention to NOTE These contain notes on related information TIP These provide tips that may save you time or CAUTION! These provide specific cautions about The following resources are available to provide you with Your authorized Control4 representative or Control4 Web Site Controller. This chapter introduces a Control4 home system and Role in a Control4 System. Control4 systems are uniquely configured for every Your system may be simple or An essential component in every Control4 home system Media Controller, for NOTE During the importing process, Media Controller Once music has been imported to the Media Controller Music Server. Powerful Home Automation Controller Multiple Interfaces — Uses Control4 Touch. Screens, Keypads, System Remote Controls, Requirements. To use Media Controller as designed, meet the following Controller For any controller purchased through Control4, see the NOTE For a complete list of supported devices and What's in the Box. The following hardware and software is required and Control4 Media Controller with OnScreen Navigator Control4 System Remote Control with 4 AAA. Batteries. Component video cable. Svideo cable. Composite video cable. IEC power cord. IR emitters 8. Stereo RCA cable. WiFi antenna extension cable. Control4 OnScreen Navigator User Guide. This manual. About the Media Controller. Control4 Media Controller is a complete digital

musicMedia Controller is a keyIn addition to the supportedFor audio distribution, it allows you to define preamplifierWiFi—to function.. The Media Controller provides media management.<http://prim-chess.ru/userfiles/colt-ar-15-sp1-manual.xml>

ItOnce the Media Controller is set up, it will dynamicallySystem Remote Control. These options include roomspecific menus and controls.Media Controller.IR sticky emitters that can be placed over IRController to the target.Composite port pairs for up to 4 videoOn and Off commands. Ethernet connection.USB device.Component, and VGA port for displayingThis chapter explains how to set up the Control4 homeThe essential tasks arePlan Your Equipment Layout. This section explains things you should know or be awareIn a Media Controller system, physical and logicalThis section describes, in general terms, how to set up theYou should also refer toTo set up the logical connections required, refer to. Control4 Composer User Guide software documentation. Home Network Requirements. Ensure that your home network wiring is in place beforeConsider these networkingMedia Controller can be used in Ethernet and WiFiZigBeeenabled products. The network wiring required for your system dependsFigure 21. Sample Setup SimpleThere are four Video Out format options to choose from.If you have multiple connection options for a videoTable 21. Video Connection Options Ranked by Quality. Rank. Port. DescriptionSVideo. Composite. Use a Worksheet. To use a worksheet to plan your connectionsConnection Options and Typical Use. Serial 12—StandardReserved forPlugable Terminal Block connectors RS232, RS422, or RS485 for a projector or. Refer to yourTerminal Block connectors forBlock connectors provideIR Out—3.5 mm jacks for up to 8. IR sticky emitters that can beController to the target. Reserved forComposite port InOut pairs for upUSB—Two USB ports for cardModem—RJ11 port for modemInOut. Audio In—RCA LeftRightAudio Out—RCA LeftRight pairs for stereo channelVideo Out—. Reserved forComponent, or VGA for displayingPower—AC Input IEC. Power Cord. Included power cord only. Connect to a Monitor or TVMedia Controller using the VGA. Component, SVideo or CompositeIf you are using an Ethernet connection for Media.

Controller, plug the data cable from the home networkConnect Devices. For the hardware you want included in the system.If you are not sure which connectionDevices”. Use the Plugable Terminal Blocks. Many Media Controller connections, including Serial PortsTerminal Block—a removable plastic part with lockingMedia Controller ships withNOTE When you connect dry contact closure devices,Block you reserved for that device refer to Table 22Connect Wires to a. Configurable Serial Port. Media Controller provides four serial ports Two that useWiring to one of the configurable ports depends on theRefer to your device’s documentation and the followingRefer also toTable 23. Serial Port Configuration Options. Connector Type Transmit. Receive. GroundConfigurable Port. Function. DB9 Pin. Phoenix. Connector. TransmitTo add a remote infrared IR receiver to your Media. ControllerSignal, and Ground to one of the Media Controller IR. In connectors a Plugable Terminal Block connector. Refer to the IR receiver’s documentation toTerminal Blocks” on page 20.Control ThirdParty Devices. Your system may contain thirdparty products that shipTo provide a way for. Media Controller to control a device that only recognizes. IR commands, complete the following setup.Media Controller.You can now use the System Remote Control to controlUse Video Sense Loop toSense Loop In port. Then use the companion Video. Sense Loop Out port for the device’s video out as needed. Connect AV Devices to One AnotherController, then connect all amplifiers and other. Amplifier or a thirdparty amplifier to Media. Controller, then connect all applicable speakersFor example,TV’s Video In. Relocate the WiFi Antenna. The WiFi antenna is installed behind the Media ControllerWiFi antenna cover by pinching it at the topUSB port.Set Up Logical Connections. Thus far you have set up the physical connections for the. Control4 home system. But the setup is not complete untilFor instructions, refer to the Control4 Composer User. Guide.

Once you have completed the physical and logical setupNavigator home page on the monitor or TV. Complete theFor example, press the Radio button on the Remote. Control and the onscreen display

shows the RadioThis chapter introduces user interfaces available to Media. Controller users and the common system tasks you canUser Interfaces. The following user interfaces are available by default with. Media Controller. OnScreen Navigator. System Remote Control with LCD. Media Controller Front Display. Additional user interfaces ship with navigation devices thatOnScreen Navigator. Media Controller provides an onscreen menu called. Control4 OnScreen Navigator. Once Media Controller isOnScreen Navigator home page at any time. The home page provides access to the followingRadio Allows you to browse all stations available, XM, NET, or Cable. Music Displays playback options by song title, Also provides Record. Music on a submenu, that displays recording optionsTV Choose to browse all or pick a category, thenComfort Allow you to control all comfort relatedIt can also displayLights Provides a list of rooms from which youHouse Displays control options for miscellaneousInfo Displays your personal profile and options forLocation Set the room location and associated. For detailed information about using OnScreen. Navigator, refer to the OnScreen Navigator User Guide. The Control4 System. Remote Control thatController includes aFor detailed information on the remote control, refer to the. System Remote Control User Guide included with your. Control4 remote control. The information that displays on the Media Controller frontController buttons or with some other system navigationTo view or edit Media Controller setup informationSETUP button. The System Configuration screen isPlay a CD. To play a CD from Media ControllerCD tray. The LCD should now display the CD menu.Choose a Playlist OptionCD tray. The LCD should now display the CD menu.The PlaylistCreate a new playlist.

<http://gestibrok.com/images/canon-ir3230-manual.pdf>

Load a CD to a new or existing playlist. Select a playlist to be playedCD tray.CD tray.CD tray.Media Controller has been prepared to support futureManagement. For example, the buttons on the front panel will some dayWireless Touch Screen or OnScreen Navigator.Information. Warranty. Important Warranty terms may be different with the country ofLimited Hardware Warranty. Control4 warrants its Media Controller product to be free fromControl4 Corporation or an Authorized Control4 Dealer. How long the warranty is effective. Control4 Media Controller are warranted for one 1 year fromWhat the warranty does not coverControl4s specifications for the components. Control4 furtherThis warrantyAuthorized Control4 Dealer.They supersede any prior,Some states do not allow limitations on how long an impliedControl4 as provided below, and within a reasonable time. Control4 will provide, at its option, one of the following 1 aIn the event of repair or replacement, thereControl4 will not provide, and willSection 7 below within thirty 30 days after discovering theThe owner must give Control4 aAll productsAuthorization RMA number. The RMA number is obtainedRMA is valid for a 30day period. After the 30day period, theAny shipments received not consistentControl4 is not responsible for products returned without a valid. RMA number. Compliance with the requirements of thisSome states do not allow the exclusion or limitation of incidentalConvention on Contracts for the International Sale of Goods willSalt Lake City, UT 84020. This warranty gives you specific legal rights, and you may alsoSoftware Agreement. The Control4 Media Controller contains preinstalled software. Please read the following Control4 terms before proceeding. NOTE Carefully read this License Agreement and the. Limited Warranty statement before operating theRights in the software areIf you do not agree to the termsTerms that Govern Software Use.

<https://www.efg-badoeynhausen.de/images/canon-ir3235-manual-pdf.pdf>

You may only use the software as designed on the device onYou may not reverse, assemble, orImportant This Control4 Software Limited Warranty shall coverControl4 product, including any operation system software. The Remedies provided in this document are your sole andIn no case shall Control4s liability exceed the purchase price for. The limitations set forth above willFCC Information. FCC Interference Statement. This equipment has been tested and found to comply with theRules. These limits are designed to provide reasonableHowever, there is noAny changes or

modifications not expressly approved by the manufacturer. This device complies with Part 15 of the FCC Rules. Operation PDF Version 1.4. Linearized No. Page Count 44. Page Mode Use Outlines. XMP Toolkit XMP toolkit 2.9.113, framework 1.6. About uuid:a88dbdd0b22b41c295956e7a55e47267. Producer Acrobat Distiller 6.0 Windows. Create Date 20050113 085322Z. Creator Tool FrameMaker 7.1. Modify Date 20050113 085322Z. Document ID uuid:3905c4a4911a47199bf96ecb6b1f9667. Creator jmooney. Title MediaController.book. Author jmooney. Control4 makes no representations or warranties with respect to any Control4 software, and specifically disclaims any express or implied warranties of merchantability or fitness for any particular purpose. Control4 reserves the right to make changes to any and all parts of Control4 software and hardware, at any time, without any obligation to notify any person or entity of such changes. Trademarks Control4 and the Control4 logo are registered trademarks of Control4 Corporation. Other product and company names mentioned in this document may be the trademarks or registered trademarks of their respective owners. Legal Notice Fraunhofer IIS and Thomson. MPEG Layer3 audio coding technology license from Fraunhofer IIS and Thomson. Gracenote is the industry standard in music recognition technology and related content delivery. All rights reserved.

No part of this publication may be reproduced, photocopied, stored on a retrieval system, or transmitted without the express written consent of the publisher. Contact Us Control4 Corporation 1 1734 S. Election Road, Suite 200 Salt Lake City, UT 84020 USA. control4.com Media Controller Installation and User Guide Part Number 210050 Rev A Draft 7 in progress Hardware Model Number A V MMC1B NOTE These contain notes on related information about the current topic. TIP These provide tips that may save you time or effort. CAUTION! These provide specific cautions about improper use of equipment or failure to follow safety instructions that may cause bodily injury. Role in a Control4 System Control4 systems are uniquely configured for every customer and every site. Your system may be simple or complex, depending on what you want the system to control. An essential component in every Control4 home system is a controller, such as Media Controller, that acts as the brain of the system. In addition to providing control options, Control4 controllers are designed to meet specific home system needs. Media Controller, for example, provides extensive media management services and has a large hard drive for audio storage mainly for CDs that you rip to the hard drive. NOTE During the importing process, Media Controller converts CDs to MP3 or WAV format to provide convenient playback. Once music has been imported to the Media Controller hard drive, or other media has been stored in connected devices, you can use Media Controller to manage your media collections, play music, or access other stored media. Media Controller is a key component in any Control4 system where music storage and management is required. In addition to the supported It also provides control of connected devices. For detailed installation instructions, refer to "Set Up the System" on page 11.

Once the Media Controller is set up, it will dynamically maintain the options displayed on any navigation device associated with it such as a Mini Touch Screen or a System Remote Control. These options include room specific menus and controls. It includes making hardware connections. The essential tasks are 1. Plan Your Equipment Layout 2. Connect to a Monitor or TV 3. Connect to the Network 4. Connect Devices 5. Connect A V Devices to One Another 6. Relocate the WiFi Antenna 7. Set Up Logical Connections 8. Check Setup Using OnScreen Display Plan Your Equipment Layout This section explains things you should know or be aware of when planning your layout "Physical and Logical Connections" "Home Network Requirements" "Sample Setup Diagrams" "Determine Best Video Option" "Use a Worksheet" This section describes, in general terms, how to set up the physical connections required for Media Controller and all of the devices associated with it. You should also refer to any device specific documentation for additional installation instructions. To set up the logical connections required, refer to Control4 Composer User Guide software documentation. Home Network Requirements Ensure that your home network wiring is in place before starting your system setup. If you have multiple connection options for a video component,

you need to determine the best connection available. In Out Audio In —RCA LeftRight pairs for stereo channel input for up to 3 stereo analog sources. 1. 2. 3. Connection Options and Typical Use Reserved for Audio Out —RCA Left Right pairs for stereo channel output for up to 3 stereo line level outputs. 1. 2. 3. Video Out — Choose one option Composite, S Video, Component, or VGA for displaying navigation menus and media databases on a monitor or TV not for viewing movies. 1.

Power —AC Input IEC Power Cord Included power cord only Connection Options and Typical Use Reserved for Connect Devices For the hardware you want included in the system, connect the applicable devices to Media Controller including such things as contact sensors, relays, IR sensors, and some A V equipment, such as an audio amplifier or switch. Media Controller ships with one plugable terminal block for every applicable port. Connect Wires to a Configurable Serial Port Media Controller provides four serial ports Two that use standard male DB9 connector and two that are configurable as RS232, RS422, or RS485 and provide hardware handshake. Wiring to one of the configurable ports depends on the wiring requirements of the device you are connecting. Refer to your device's documentation and the following tables to determine how to wire the port. Refer also to "Use the Plugable Terminal Blocks" on page 20. Refer to the IR receiver's documentation to determine wiring needed and see "Use the Plugable Terminal Blocks" on page 20. Function DB9 Pin Phoenix Connector Transmit 2 TX 1 Receive 3 RX 3 Ground 5 GND 9 To provide a way for Media Controller to control a device that only recognizes IR commands, complete the following setup. 1. Plug the 3.5 mm connector end of one of the 8 IR stickon emitters provided into an IR Out port on the Media Controller. 2. Place the stickon emitter end over the IR receiver on the media player, TV, or other target device to transmit IR signals from the Media Controller to the target. You can now use the System Remote Control to control the connected IRcontrolled device. Then use the companion Video Sense Loop Out port for the device's video out as needed. Connect A V Devices to One Another 1. Connect Audio components to one another. For example, if you intend to play DVDs directly from a DVD player to your TV, connect the DVD player's Video Out to the TV's Video In.

Relocate the WiFi Antenna The WiFi antenna is installed behind the Media Controller front panel door. If Media Controller is installed in an all metal rack with front metal doors, then WiFi may not function very well. In this case, the WiFi antenna may be relocated outside of the rack. To relocate it 1. Remove the WiFi antenna from the front panel position 1a. Open the front panel door, then remove the WiFi antenna cover by pinching it at the top and bottom. 1b. Unplug the WiFi antenna from the front USB port. 2. Using the WiFi extension USB cable provided, connect the WiFi antenna to the back panel USB port. 3. Adjust the WiFi antenna position outside of the metal rack. Set Up Logical Connections Thus far you have set up the physical connections for the Control4 home system. But the setup is not complete until you set up the system's logical connections as well. To complete the logical setup, use a PC connected to the home network with Control4 Composer software installed. For instructions, refer to the Control4 Composer User Guide. Complete the following steps to check the setup. 1. On the remote control, press to display the On Screen Navigator home page or main menu on the monitor or TV. If screen does not display, check the power to the monitor. 2. Press any subsystem button to jump to that subsystem's menu, then press to return to the home page. For example, press the Radio button on the Remote Control and the onscreen display shows the Radio menu. Then, press to return to the home page. User Interfaces The following user interfaces are available by default with Media Controller OnScreen Navigator System Remote Control with LCD Media Controller Front Display Additional user interfaces ship with navigation devices that are sold separately and are described in the documentation that ships with the device. OnScreen Navigator Media Controller provides an onscreen menu called Control4 OnScreen Navigator.

Once Media Controller is setup and a monitor or TV is connected to it, you can press the button on

the remote control to access the OnScreen Navigator home page at any time. If the TV or other source is on, it should respond to the request. System Remote Control with LCD The Control4 System Remote Control that ships with Media Controller includes a liquid crystal display LCD, in addition to a variety of buttons for accessing and controlling system components and media. The information that displays on the remote control LCD depends on the action you choose with the. For detailed information on the remote control, refer to the System Remote Control User Guide included with your Control4 remote control.

Play a CD To play a CD from Media Controller 1. On the Media Controller front panel, open the CD tray press the EJECT button, load a CD, and close the CD tray. The LCD should now display the CD menu. 2. Using the dial, choose Play CDs turn the dial to highlight Play CDs, then press the dial. Choose a Playlist Option 1. On the Media Controller front panel, open the CD tray press the EJECT button, load a CD, and close the CD tray. The LCD should now display the CD menu. 2. Using the dial, choose Playlist turn the dial to highlight Playlist, then press the dial. The Playlist options display Create a new playlist Load a CD to a new or existing playlist Select a playlist to be played 3. To create a new playlist 3a. Choose Create a new playlist and then follow the screen prompts. 3b. When you are finished with the CD, open the CD tray, remove the CD, and close the CD tray. 4. To load a CD to a new or existing playlist 4a. Choose Load a CD to a new or existing playlist and then follow the screen prompts. 4b. When you are finished with the CD, open the CD tray, remove the CD, and close the CD tray. 5. To select a playlist to be played 5a. Choose Select a playlist to be played and then follow the screen prompts. 5b.

When you are finished with the CD, open the CD tray, remove the CD, and close the CD tray. As features are added and software updates become available, you will be able to use your box for such things as System Navigation, Caller ID, and Media Management. For example, the buttons on the front panel will some day provide navigation options that are currently available only in the full featured navigation methods such as Wireless Touch Screen or OnScreen Navigator. Limited Hardware Warranty Control4 warrants its Media Controller product to be free from defects in material and workmanship during the warranty period. If the Media Controller proves to be defective in material or workmanship during the warranty period, Control4 will, at its sole option, repair or replace the product with a like product. The warranty extends only to products purchased directly from Control4 Corporation or an Authorized Control4 Dealer. How long the warranty is effective Control4 Media Controller are warranted for one 1 year from the date of the first consumer purchase. This warranty extends only to products purchased directly from Control4 or an Authorized Control4 Dealer. 2. DISCLAIMER OF OTHER WARRANTIES The preceding warranties are the exclusive and sole express warranties given by CONTROL4. They supersede any prior, contrary or additional representations, whether oral or written. Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you. 3.

EXCLUSIVE REMEDY FOR ANY NONCONFORMITIES If during the applicable Warranty Period, the product does not conform to the preceding Warranties, the Owner shall notify Control4 as provided below, and within a reasonable time Control4 will provide, at its option, one of the following 1 a replacement product for any nonconforming or defective component such replacement product may be new or refurbished to be comparable in function and performance to a new product or 2 the price at which Control4 sold the non conforming product. In the event of repair or replacement, there may be a loss of data in the memory of the product for which warranty service is sought. Control4 will not provide, and will not be liable for, labor, costs of removal or reinstallation of product, disposal, freight, taxes, or other incidental charges. The notice must describe the location and nature of the nonconformity. The owner must give Control4 a reasonable opportunity to the claimed nonconformity before undertaking any repairs, removal or replacement. All products returned to Control4 require a Return Merchandise Authorization RMA number. The RMA number is obtained from Control4 Customer Support Department. The RMA number must be clearly ma

placed on the outside of each box. The RMA is valid for a 30-day period. After the 30-day period, any shipments received not consistent with the RMA, or after the RMA is cancelled, will be refused. Control4 is not responsible for products returned without a valid RMA number. Compliance with the requirements of this paragraph is a condition to coverage under the Warranty. If these requirements are not complied with, Control4 will have no obligation to provide any remedy for any breach of warranty. 4.

DISCLAIMER OF INCIDENTAL AND CONSEQUENTIAL DAMAGES IN NO EVENT SHALL CONTROL4 BE LIABLE FOR ANY INCIDENTAL, SPECIAL, INDIRECT OR CONSEQUENTIAL DAMAGES, WHETHER RESULTING FROM NONDELIVERY OR FROM THE USE, MISUSE OR INABILITY TO USE THE PRODUCT OR FROM DEFECTS IN THE PRODUCT OR FROM CONTROL4'S OWN NEGLIGENCE. This exclusion applies even if the remedy provided by Control4 fails of its essential purpose. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation may not apply to you. 5. APPLICABLE LAW This Warranty will be interpreted, construed, and enforced in all respects in accordance with the laws of the State of Utah, without reference to its choice of law rules. The U.N. Convention on Contracts for the International Sale of Goods will not apply to this Warranty. 6. SEVERABILITY If any provision of this warranty is found to be invalid or unenforceable, then the remainder shall have full force and effect, and the invalid provision shall be partially enforced to the maximum extent permitted by law to effectuate the purpose of the agreement. Software Agreement The Control4 Media Controller contains pre-installed software. Please read the following Control4 terms before proceeding. NOTE Carefully read this License Agreement and the Limited Warranty statement before operating the equipment. The rights to the software are licensed, not sold. Control4 or its licensors continue to own all intellectual property rights to the software, and you will be granted certain rights to use the software upon your acceptance of this license. Rights in the software are offered only on the condition that you agree to all terms and conditions of the License Agreement. Operating the equipment indicates your acceptance of these terms and conditions. If you do not agree to the terms and conditions of the License Agreement, return the complete package for a full refund now.